



 
Automatic Watch Winder  
HD009 HD010 HD014 HD015

Instruction Manual

<u>content</u>	<u>page</u>
AC OPERATION _____	2
DC OPERATION _____	3
LOADING THE WATCH ON THE WATCH PILLOW _____	4
PLACING YOUR WATCH TO THE WINDER _____	5
MODES OF WINDING _____	6
TURN ON THE POWER _____	7
MODES SPECIFICATIONS _____	8
MAINTENANCE _____	9

## AC OPERATION


Plug in the AC power adapter to the wall and insert the DC power jack into the back of the unit.

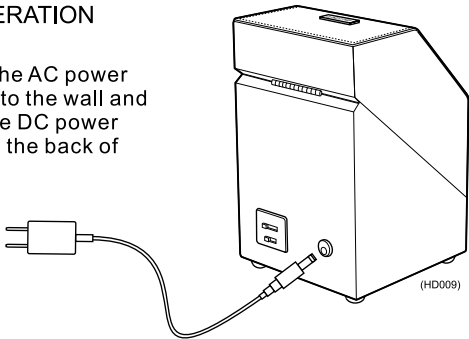

Note: Disconnect the AC power adapter when the winder is not in use.

## DC OPERATION (not available for HD014 & HD015)

 
Insert D-sized batteries into the battery compartment at the bottom of the unit.

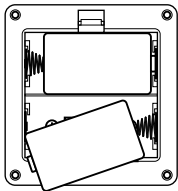

Note: Batteries are not included.  
Remove all batteries when the winder is not in use.


## LOADING THE WATCH ON THE WATCH PILLOW

 Take out the watch pillow and squeeze it to a suitable size, then fasten the watch on it.

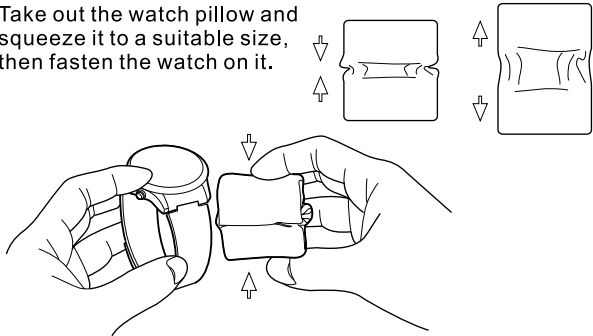

## PLACING YOUR WATCH TO THE WINDER

 
Insert watch and watch pillow into the watch winder holder.

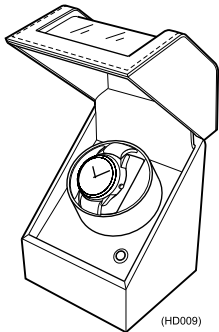

(HD009)

## MODES OF WINDING

 Slide the switches to select the winding modes. There are 4 turning modes (TPD - turns per day) and 3 direction modes (clockwise, counterclockwise and both directions) to wind your watch.

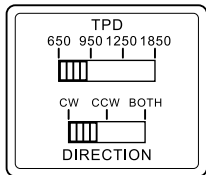

## TURN ON THE POWER

 
Press the round power button to turn on the watch winder and start the turning.



POWER  
OFF



POWER  
ON

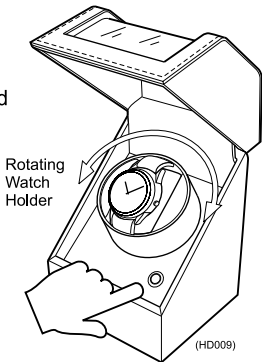



## MODES SPECIFICATIONS

TPD	Clockwise winding	Counterclockwise winding	Clockwise/ counterclockwise winding	Resting time (one direction/ both directions)
650	1 min	1 min	1 min/1 min	19 min/38 min
950	1 min	1 min	1 min/1 min	13 min/26 min
1250	1 min	1 min	1 min/1 min	10 min/20 min
1850	1 min	1 min	1 min/1 min	6.5 min/13 min

Data is based on using an AC adapter. Values may vary depending on the weight of different watches.

## MAINTENANCE

Do not expose the watch winder to direct sunlight, extreme temperatures, water, or other moisture which may damage the winder.

Clean the winder surfaces with the microfiber pouch that comes with the package.

Do not use solvent-based cleaning agents.

Please do not open the watch winder or attempt to repair it.